



UwaNxt - INSTALLATION MANUAL (UwaLock)

1. Start with installing the door lock on the door by using the required accessories provided in the door lock box.
2. Now fix the brain on a nearby wall with the clamps provided in the package.
3. Connect the brain and the door lock with the connector
4. Plug the Brain AC socket into the electric shoe

BRAIN CONFIGURATION

1. Install Uwanxt App from App Store
2. You should be connected to internet through Wi-Fi during the configuration process
3. Open the Uwanxt app and create an account by using your mobile number and set a password.
4. You will receive an OTP on the above mobile number, enter the OTP and verify your number.
5. Follow the instructions in the app and create a room with the room type as "Door"
6. Select "Door Lock" as the device
7. On the next screen, enter Unique ID of your device printed on the brain.
8. You will be asked to enter the password for the Wi-Fi now. (Kindly ensure that the SSID matches with the name of the Wi-Fi you're connected to)
9. That's all folks, you are good to go. You will be automatically redirected to the home screen with a room created for the door.

APPLICATION MENU OPTIONS

1. **Share Access** – This option let's you share the device access to other user.
2. **Favorites** – You can add the device to favorites for easy access
3. **Wi-Fi Configuration** – Use this option to set your Wi-Fi password, if changed.
4. **Activity History** – This option let's you know about all the activities on your device.

ABOUT THE BRAIN

LED Status

Stable – Device is active & working.

Off – Device is powered Off/No Wi-Fi Signal/Wrong Wi-Fi Password

Slow Blinking – Device is connected to Wi-Fi, but there is no internet Connection.

Fast Blinking – Device is not configured. You need to configure it through Uwanxt App.

Button

Red Button – Press & hold the button for 4 seconds. The device will come back to unconfigured state. Configure it again using Uwanxt App through Wi-Fi Configuration option to re-use it